


Fitting Instructions

With these instructions you will find sufficient brackets and wood screws for fitting your blind

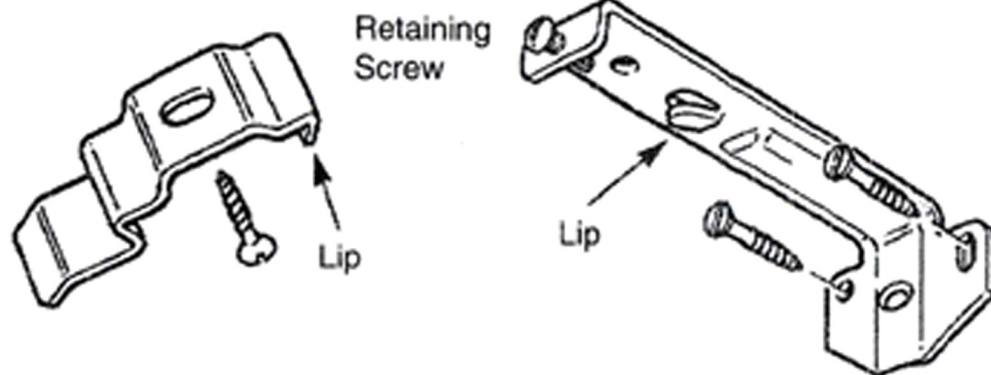

Top Fixing Brackets

Fix brackets to ceiling or lintel with holes drilled on a line at least 3" (75mm) from the wall or window frame for blinds with 5" (127mm) louvres or 2 1/8" (55mm) for blinds with 3 1/2" (89mm) louvres End brackets should be about 1 1/2" (40mm) from the ends of the track. Any remaining brackets should be spaced evenly between these brackets.

Face Fixing Brackets

Fix brackets to wall or window frame as closely as possible to the ceiling or lintel with same spacing as recommended for top fixing brackets.

Fitting the Track

Track must be fitted into brackets keeping controls top side ordered. Locate the small lip projecting from brackets into groove in track. Push track up into brackets. Spring clip brackets will hold your track without further adjustment. If your brackets have retaining screws these should now be screwed into the other slot in the track. (Do not over tighten the screws. This is unnecessary and will damage track.)

Remove packing material from track releasing the cord and chain. (cord control traverses louvres and chain control rotates them.)

Fitting the Louvres

Turn books so that the slots are 90° to the track. Hang louvres keeping all seams one way. Your blind is now ready to operate

Fitting the Weights


Simply slide the weights into the pocket at the bottom of the louvres, make sure the lugs are at the top near the sew line.

IMPORTANT: DO NOT TRAVERSE BLINDS WITH LOUVRES IN CLOSED POSITION. ALWAYS TURN THEM 90° TO THE TRACK BEFORE OPERATING CORD CONTROL.

Fitting the chain

To attach the chain to the weights simply slide the clip down the lug of the weight rather than push the clip on to the lug this will only weaken the clip or snap it completely.

Slide the clip down onto the weight

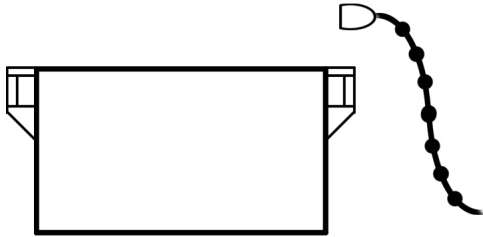

View from above

